


LiveBird Motion Mount



Contents:

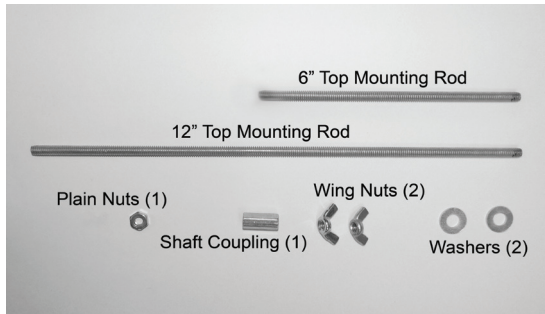

The packing Box contains:

- (1) LiveBird Motion Mount Base
- (1) LiveBird Motion Mount Top
- (2) ¼-20 Wing Nuts
- (1) ¼-20 Nut
- (1) 6" Top Mounting Rod
- (1) 12" Top Mounting Rod
- (1) Shaft Coupling
- (2) Washer

Not Supplied:

- (4) "D" Cell Batteries

To Assemble

Free stating decoy assembly

- 1) Insert Batteries
- 2) Inspect bottom of the Top for proper placement of 2 disc magnets and reposition as required
- 3) Place top over shaft and position as shown
- 4) Attach Top to base with Wing Nut and tighten securely

If free standing decoys are used assembly is complete

Attaching a stake based or shell decoy

- 1) If a light weight Shell decoy is to be used, screw shaft coupling to shaft and screw in and tighten the shell extension rod
- 2) Run ¼ -20 Nut and Washer down top of shaft approximately 1 inch
- 3) Place decoy over the shaft and rest on the Nut
- 4) Secure tightly with the second Washer and ¼-20 Wing Nut

Assembly is now complete

High/Low Switch

For heavier decoys or to make lighter decoys move faster, use the High/Low Switch to adjust speed.

Operation Tips

Place stand and decoy in desired position on as level ground as possible.

On windy days, you may want to bury the base of the unit half way into the dirt.

Adjust the position of the decoy until it is approximately balanced on the top or the base. The unit is designed to wobble and if the decoy is off center it will create less wobble and shorten battery life, especially with heavier decoys.

The unit is water resistant but not water proof. Rain and snow won't harm the unit but it is not designed to be submerged in water.

